

## **V AND U CONNECTOR MAINTENANCE**

### General Maintenance Instructions

#### **- Seismic Activity**

Seismic connectors must be replaced after any seismic activity.

#### **- General Inspection**

1. Hose damage
2. End fitting damage
3. Frayed or broken braid wires
4. Overall structural integrity of the V or U connector

**If any damage is found or it fails testing the V or U connectors must be replaced**

#### **- Maintenance**

Extreme care must be taken to cross tighten the bolts frequently so the assembly does not get pulled past its designed limits. V and U connectors should be inspected with routine maintenance and inspections of the piping system it is connected to in order to safeguard against the above listed damages or failures.

For more information or call Twin City Hose Inc. toll free at **1-800-670-9475**